



RX-1s

BODY WORN CAMERA



Foreword:

Thank you for purchasing the RX-1s Body Worn Camera.

Safety:

1. Do not drop, hit or puncture this product.
2. To prevent damage, do not store this product in a dusty, high or low temperature, humid or strong vibration environment.
3. Do not use corrosive chemicals or solvents to clean this product.
4. This product is not self-serviceable or self-repairable. If the product develops a fault, please return it to Rewire Security for assessment or repair.

Caution:

1. Choking hazard - Keep this product and its accessories out of reach of children.
2. Keep this product away from open flames.
3. Electromagnetic waves of specific frequencies may affect image quality.

Notice:

1. We recommend doing a trial run before using this product.
 2. Preserving battery life - For long periods of no use or storage, please ensure the device is charged to 50% every three months.
- To prolong battery life, please fully charge before use.



1. Parts description

2. Key function description

Power button: long press to power on or off.

After turning on, press the power button to switch modes: video recording mode—photographing mode—recording mode—playback mode—setting mode

Function key: press to start and stop recording, and short press on the camera to take pictures. Long press to switch between the main and secondary screens.

Red light: charging indicator light (the red light is on when charging, and the red light is off when fully charged).

Blue light: The blue light is always on when on standby, and the blue light flashes when recording.

3.Operation guidance



Sliding to the right will open and hide the shortcut menu.

Note: The shortcut menu can only be entered by sliding right. To exit photo, audio, playback or menu, swipe to the right.

The menu functions are as follows:



Click on the torch option to turn the torch on, click on the torch option again to turn the torch off

4. Photo mode: button operation

Short press to take photo and long press to switch to main screen



Hold power button to turn on/off, short press to switch between modes

5. Recording mode

Short press to start and stop recording. Long press to switch to main screen



Hold power button to turn on/off, short press to switch between modes

6. Playback mode:

Short press to select



Hold power button to turn on/off, short press to switch between modes

Swipe up or down to navigate screen. Press for selection

7.Set mode:

Short press to select



Short press to switch modes,
long press to shutdown

Swipe up or down to navigate
screen. Press for selection

Recorder settings

Video resolution

Video resolution supports 1080p30, 720p30 and 480p30. The default resolution is 1080p30. The larger value, the greater the resolution. Larger resolution will result in larger file size.

Image Size

Image size supports 48M, 40M, 34M, 26M, 20M, and 3M. The default resolution is 48m. Larger value = greater resolution.

Video Quality Enhances

Video quality includes two options; On and Off. The default is Off. The file recording size and quality will be higher when selecting On.

Post Record (25s)

Post Record includes two options; On and Off. The default is Off. When selecting On, video recording will continue for 25 seconds after recording is turned off.

Snap Shots

Snap shots include; Off, 3 Sequence, 5 Sequence, 10 Sequence, 15 Sequence, 20 Sequence and 25 Sequence. Default is Off. The selected option is the number of photos continuously photographed while taking pictures.

Loop Recording

Loop Recording includes two options; On and Off. The default is set to Off.

Video Segment

Video Segment includes 5 minutes, 10 minutes and 15 minutes. The default is 5 minutes.

Slide Show

Slide Show includes 2S, 5S and 8S. The default is 2S. This is the time set for images to appear before moving to the next image.

Audio On/Off

Video audio includes off and on. The default to is on. This feature selects whether the video has audio or not.

Date Stamp

Date Stamp includes off and on. The defaults is on. This feature selects whether the file has a dtiae stamp.

Auto Off

Auto Off includes off, 3 minute, 5 minutes and 10 minutes. The default is off. Auto Off means how long the device will remain on with no activity before it turns off automatically.

Screensaver

Screensaver includes on or off. The screensaver will automatically turn on when device not in use.

Key Tone

Key tone includes on or off. This will turn on and off the audible key tone.

Language settings

Language settings includes English, Francais, Espanol, Portugues, Deutsch and Italiano. This option can select the language displayed by the device.

Auto Night Mode

Auto Night Mode has two options, manual and automatic. When the set to automatic, the device will automatically detect if the area has poor lighting and turn on the Night Mode. The screen will invert into a black and white picture. When set as manual, you will need to click on the infrared light button.

Screen Save

Screen Save includes off, 30 Seconds, 1 Minute and 3 Minutes. The default is Off. The screen will automatically turn off when device not in use.

Camera ID

This option allows you give the device an ID number and the police number.

Note: The police number and the device ID are displayed in the lower left. Video and photo date stamp display below the front.

Change Password

The administrator password will be required before you can change the device's password. Once the administrator password is entered, you can change the password.

Password on/off

The password on/off has two options; off and on. The default is off. You will need to administrator password to make changes.

Volume Adjustment

Volume Adjustment has the following options; Off, Low, Medium and Hight. The default is High. This is the volume level set for video recording.

Date / Time

The date and time of the camera can be set by this option. The date format can also be changed.

Format

Format has two options of OK and Cancel. Formatting will delete all videos and image files from this device. The default is Cancel.

Default settings

The default setting has two options. Select "OK" to restore factory settings.

Version

This option displays the device's software version number.